

# **PPP DATA**

# Installation/Configuration

(Windows 95/98/Me/NT/2000/XP)

Iridium Satellite LLC Draft; March 15, 2002

1	PPP Data Overview	3
2	Modem Driver Installation and Configuration	4
	2.1 IMPORTANT CONSIDERATIONS	4
	2.2 WINDOWS 95/98 SETUP	
	2.2.1 Install the Modem Driver	
	2.2.2 Configure Dial-Up Networking	5
	2.3 WINDOWS ME SETUP	7
	2.3.1 Install the Modem Driver	
	2.3.2 Configure Dial-Up Networking	
	2.4 WINDOWS NT4.0 SETUP	
	2.4.1 Install the Modem Driver	
	2.4.2 Configure Dial-Up Networking	9
	2.5 WINDOWS 2000 SETUP	11
	2.5.1 Install the Modem Driver	11
	2.5.2 Configure Dial-Up Networking	
	2.6 WINDOWS XP SETUP	
	2.6.1 Install the Modem Driver	
	2.6.2 Configure Dial-Up Networking	
3	Dialing a Call	14

------OVERVIEW

# 1 PPP Data Overview

Iridium's PPP Data Service allows customers to connect directly to the Internet via the Iridium gateway without having to load any special software onto their computer. The service utilizes standard dial-up networking and has been shown to work with a variety of operating systems, though only machines running Windows are supported. As Figure 1 shows, Iridium's PPP service connects to the Internet via the Direct Internet (Apollo) server. Since no client software is loaded onto the client side, PPP Data users are not able to take advantage of the Direct Internet features of Smart Connect and Spoofing. Through the compression setting in Microsoft Dial-Up Networking, however, throughput levels can be attained that are similar to those when using Direct Internet.

# 1.1 Equipment

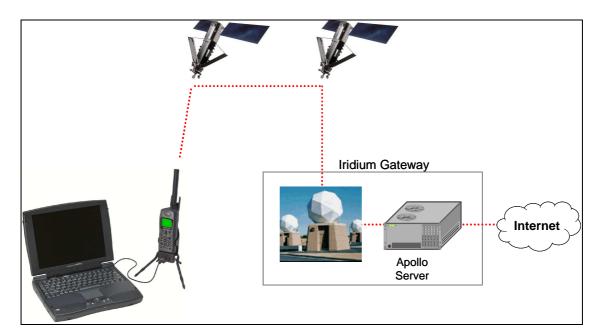


Figure 1

-----OVERVIEW

# 2 Modem Driver Installation and Configuration

Prior to using your Iridium phone as a modem for PPP Data, you must do the following:

- Install a "Standard 19200 bps" modem driver on your computer
- · Set up and configure a dial-up networking connection

# 2.1 Important Considerations

- The modem driver must be configured with the following "extra initialization string", which sets the correct bearer service for the connection: AT+CBST=71,0,1
- In the dial-up networking connection, TCP/IP should be the only enabled network protocol.
- You must have an available serial port on your computer (e.g., COM1).
- You must have Administrator privileges if using Windows NT, 2000 or XP Professional.

Iridium Satellite LLC 4 Draft; March 15, 2002

------WINDOWS 95/98

#### 2.2 Windows 95/98 Setup

#### 2.2.1 Install the Modem Driver

- 1. Close all applications.
- 2. Choose Start > Settings > Control Panel.
- 3. Double-click on Modems.
- 4. If a Modem Properties window appears, Click Add...
- 5. If you are using a laptop, you may be presented with a screen asking "What type of modem do you want to install?" Select the Other button and click Next >.
- 6. Choose the checkbox marked "Don't detect my modem; I will select it from a list" and then click Next.
- 7. Click Standard 19200 bps Modem to highlight it, and then click Next>.
- 8. Click on an available COM Port (e.g., *COM1*). This is the port to which you will connect your Iridium phone. Click *Next* >.
- 9. Click Finish.
- 10. Click Standard 19200 bps Modem to highlight it, and then click Properties.
- 11. Select the Connection tab and then click Advanced...
- 12. In the Extra settings box, enter AT+CBST=71,0,1
- 13. Click OK, OK, Close.

#### 2.2.2 Configure Dial-Up Networking

- In Windows 95: Choose Start > Programs > Accessories > Dial-Up Networking
  In Windows 98: Choose Start > Programs > Accessories > Communications > Dial-Up Networking
- 2. Double-click Make New Connection.
- 3. Enter a connection name (e.g., "Iridium PPP").
- 4. In the "Select a device" pull-down menu, select the "Standard 19200 bps Modem", and then click Next>.
- 5. Leave the Area Code box blank, and enter **008816000025** in the *Telephone number* box, and then click *Next* >.
- 6. Click Finish.
- 7. Right-click on your new dial-up connection and select *Properties*.
- 8. Uncheck the "Use area code and Dialing Properties" box.
- 9. Select the "Server Types" tab.

Iridium Satellite LLC 5 Draft; March 15, 2002

-------WINDOWS 95/98

- 10. Uncheck "Log on to network", "NetBEUI" and "IPX/SPX Compatible".
- 11. Make sure the "TCP/IP" box is checked.
- 12. Click OK.

Iridium Satellite LLC 6 Draft; March 15, 2002

-------WINDOWS Me

# 2.3 Windows Me Setup

#### 2.3.1 Install the Modem Driver

- 1. Close all applications.
- 2. Choose Start > Settings > Control Panel.
- 3. Double-click on Modems.
- 4. If a Modem Properties window appears, Click Add...
- 5. If you are using a laptop, you may be presented with a screen asking "What type of modem do you want to install?" Select the Other radio button and click Next >.
- 6. Choose the checkbox marked "Don't detect my modem; I will select it from a list" and then click Next.
- 7. Click Standard 19200 bps Modem to highlight it, and then click Next>.
- 8. Click on an available COM Port (e.g., *COM1*). This is the port to which you will connect your Iridium phone. Click *Next* >.
- 9. Click Finish.
- 10. Click Standard 19200 bps Modem to highlight it, and then click Properties.
- 11. Select the Connection tab and then click Advanced...
- 12. In the Extra settings box, enter AT+CBST=71,0,1
- 13. Click OK, OK, Close.

#### 2.3.2 Configure Dial-Up Networking

- 1. Choose Start > Programs > Accessories > Communications > Dial-Up Networking
- 2. Double-click Make New Connection.
- 3. Enter a connection name (e.g., "Iridium PPP").
- 4. In the "Select a device" pull-down menu, select the "Standard 19200 bps Modem", and then click Next>.
- 5. Leave the Area Code box blank, and enter **008816000025** in the *Telephone number* box, and then click *Next* >.
- 6. Click Finish.
- 7. Right-click on your new dial-up connection and select *Properties*.
- 8. Uncheck the "Use area code and Dialing Properties" box
- 9. Select the "Networking" tab.
- 10. Uncheck "NetBEUI" and "IPX/SPX Compatible".

- 11. Make sure the "TCP/IP" box is checked.
- 12. Click the "Security" tab.
- 13. Uncheck the "Log on to network" box.
- 14. Click OK.

Iridium Satellite LLC 8 Draft; March 15, 2002

------WINDOWS NT4.0

#### 2.4 Windows NT4.0 Setup

#### 2.4.1 Install the Modem Driver

- 1. Close all applications.
- 2. Choose Start > Settings > Control Panel.
- 3. Double click on Modems.
- 4. Click Add...
- 5. Choose the checkbox marked "Don't detect my modem; I will select it from a list." Then, click Next >.
- 6. Click Standard 19200 bps Modem, and then click Next>.
- 7. Click the "Selected ports" radio button. Click on an available COM Port (e.g., COM1). This is the port to which you will connect your Iridium phone. Click Next >.
- 8. Click Finish.
- 9. Click Standard 19200 bps Modem to highlight it, and then click Properties.
- 10. Select the Connection tab and then click Advanced...
- 11. In the Extra settings box, enter AT+CBST=71,0,1
- 12. Click OK, OK, Close.
- 13. The Modem Setup window appears and asks if you would like to configure Dial-Up Networking. Click Yes.
- 14. The Remote Access Setup window appears. Note: If a modem is already installed on the COM port that you would like to use for the Standard 19200 bps Modem, select the modem in the list and click *Remove*.
- 15. Click *Add* and select the "Standard 19200 bps Modem" from the list of RAS capable devices. Click *OK*
- 16. The new entry is added to the list of modems. Click Continue.
- 17. When asked if you would like to restart the computer, click Yes.

#### 2.4.2 Configure Dial-Up Networking

- 1. Choose *Start > Programs > Accessories > Dial-Up Networking*. If Dial-Up Networking has no "phonebook entries", you will be prompted to "Press OK to add an entry".
- 2. Click New...
- 3. In the *Entry name* box, enter a connection name (e.g., "Iridium PPP).
- 4. In the Phone number box, enter 008816000025
- 5. Uncheck the "Use Telephony dialing properties" box.

Iridium Satellite LLC 9 Draft; March 15, 2002

-------windows nt4.0

- 6. In the Dial using list, select "Standard 19200 bps Modem"
- 7. Select the Server tab.
- 8. Make sure "TCP/IP" is checked.
- 9. Uncheck "IPX/SPX compatible", "NetBEUI".
- 10. Click OK, Close.

Iridium Satellite LLC 10 Draft; March 15, 2002

------ WINDOWS 2000

#### 2.5 Windows 2000 Setup

#### 2.5.1 Install the Modem Driver

- 1. Close all applications.
- 2. Choose Start > Settings > Control Panel.
- 3. Double click on Phone and Modem Options.
- 4. Select the Modems tab and click Add...
- 5. Check "Don't detect my modem; I will select it from a list." Then, click Next >.
- 6. Click Standard 19200 bps Modem, and then click Next>.
- 7. Click the "Selected ports" button. Click on an available COM Port (e.g., COM1). This is the port to which you will connect your Iridium phone. Click Next >.
- 8. Click Finish.
- 9. Click the Standard 19200 bps Modem to highlight it, and then click *Properties*.
- 10. Select the Advanced tab.
- 11. In the "Extra initialization commands" box, enter AT+CBST=71,0,1
- 12. Click OK, OK.

#### 2.5.2 Configure Dial-Up Networking

- 1. Choose Start > Programs > Accessories > Communications > Network and Dial-up Connections.
- 2. Double-click Make New Connection, and click Next>.
- 3. Select "Dial-up to private network" and click Next>.
- 4. If a "Select a Device" window appears, check the box next to "Modem Standard 19200 bps modem", and uncheck all other devices. Click Next>.
- 5. In the Phone number box, enter **008816000025** and click *Next*>.
- 6. Choose either "For all users" or "Only for myself" and click Next>.
- 7. Enter a name for your connection (e.g., "Iridium PPP") and click Finish.
- 8. Click Properties.
- 9. Click the Networking tab.
- 10. Make sure "Internet Protocol (TCP/IP)" is checked. Uncheck all other components.
- 11. Click OK.
- 12. Close the connection box.

Iridium Satellite LLC 11 Draft; March 15, 2002

------WINDOWS XP

# 2.6 Windows XP Setup

#### 2.6.1 Install the Modem Driver

- 1. Close all applications.
- 2. Choose Start > Control Panel.
- 3. Double click on Phone and Modem Options.
- 4. Select the Modems tab and click Add...
- 5. Check "Don't detect my modem; I will select it from a list." Then, click Next >.
- 6. Click Standard 19200 bps Modem, and then click Next>.
- 7. Click the "Selected ports" button. Click on an available COM Port (e.g., COM1). This is the port to which you will connect your Iridium phone. Click Next >.
- 8. Click Finish.
- 9. Click the Standard 19200 bps Modem to highlight it and then click Properties.
- 10. Select the Advanced tab.
- 11. In the "Extra initialization commands" box, enter AT+CBST=71,0,1
- 12. Click OK, OK.

#### 2.6.2 Configure Dial-Up Networking

- 1. Choose Start > All Programs > Accessories > Communications > Network Connections.
- 2. Click "Create a new connection".
- 3. Click Next>.
- 4. Select "Connect to the Internet" and click Next>.
- 5. Select "Set up my connection manually" and click Next>.
- 6. Select "Connect using a dial-up modem" and click Next>.
- 7. If a "Select a Device" window appears, check the box next to "Standard 19200 bps modem", and uncheck all other devices. Click Next>.
- 8. Enter a connection name (e.g., "Iridium PPP") and click Next>.
- 9. In the Phone Number box, enter 008816000025 and click Next>.
- 10. If using XP Professional Edition, a window may appear to select either "Anyone's use" or "My use only". Choose either selection and click Next>.
- 11. A username and password are not necessary. Click Next>.

Iridium Satellite LLC 12 Draft; March 15, 2002

------WINDOWS XP

- 12. Click Finish
- 13. Click Properties.
- 14. Click the Networking tab.
- 15. Make sure "Internet Protocol (TCP/IP)" is checked. Uncheck all other components.
- 16. Click OK.
- 17. Close the connection box.

Iridium Satellite LLC 13 Draft; March 15, 2002

------DIALING A CALL

# 3 Dialing a Call

To place a PPP Data call, you must open the Dial-Up Networking window and select the dial-up connection you created for your Iridium phone.

- 1. Connect the computer and phone.
- 2. Orient the phone's antenna with a clear view of the sky.
- 3. If your computer is turned off, turn it on and wait for it to boot up.
- 4. Turn on your Iridium phone and wait for it to register with the satellite network.
- 5. Depending on your Windows operating system, choose one of the following to open the Dial-Up Networking window:
  - Start > Programs > Accessories > Dial-Up Networking
  - Start > Programs > Accessories > Communications > Dial-Up Networking
  - Start > Programs > Accessories > Communications > Network and Dial-up Connections
  - Start > All Programs > Accessories > Communications > Network Connections
- 6. For **Windows 95/98/Me/2000/XP**, double-click the dial-up connection you created (e.g., "Iridium PPP"), and then click *Connect* or *Dial.* (Note: A username and password are not necessary, and anything in these fields will be ignored).

For **Windows NT**, select your connection from the drop down list (e.g., "Iridium PPP"), and then click *Dial*. When prompted to enter a username and password, click *OK*. (Note: A username and password are not necessary, and anything in these fields will be ignored).

- 7. As the Iridium phone is dialing, it will blink "Data Call In Progress" and a Dial-Up Networking window will appear on your computer showing the current status of the connection.
- 8. Once connected, the handset will continue to display "Data Call In Progress," but it will no longer blink.
- 9. Once authenticated, a dial-up networking session is established, and the dial-up networking icon will appear in your task bar.
- 10. You can now launch your Internet application.

Iridium Satellite LLC 14 Draft; March 15, 2002

DIALUP DATA------TRADEMARK NOTICE

#### **Trademark Notice**

Iridium and the Iridium logo are registered trademarks and/or service marks of Iridium Satellite LLC.

Windows, Windows 95, Windows 98, Windows Me, Windows NT, Windows 2000, Windows XP, Dial-Up Networking, and Internet Explorer are registered trademarks of Microsoft Corporation.

Iridium Satellite LLC 15 Draft; March 15, 2002